


## **AZ0087-CP5**

# **KIT TO CLEAN VALVE ON CP5 PUMPS**

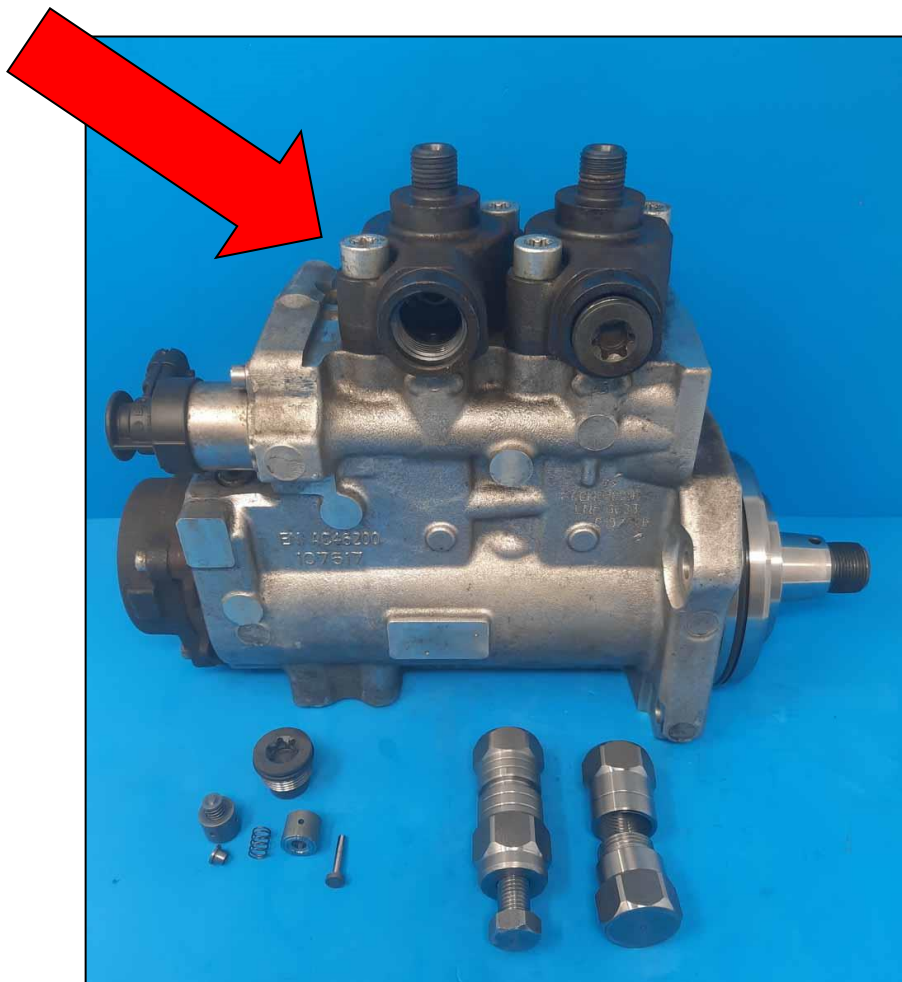

### **AZ0087-CP5**

Kit to clean valve on CP5 pumps. The kit consists of:

- AZ0087-CP5 - 01 - Tool to pull out the valve
- AZ0087-CP5 - 02 - Tool to Assemble-Calibrate the valve

# AZ0087-CP5

## KIT TO CLEAN VALVE ON CP5 PUMPS

### INSTRUCTIONS

1. Insert the valve inside the tool AZ0087-CP5-01- and tighten the screw until the valve is unlocked.




2. Once the valve is unlocked proceed with cleaning. Then assemble the valve again.



## **AZ0087-CP5**

# **KIT TO CLEAN VALVE ON CP5 PUMPS**

3. Insert the valve inside the tool AZ0087-CP5-02- and tighten the tool until it stops.  
When the tool is totally closed, the calibration of the valve is perfect!

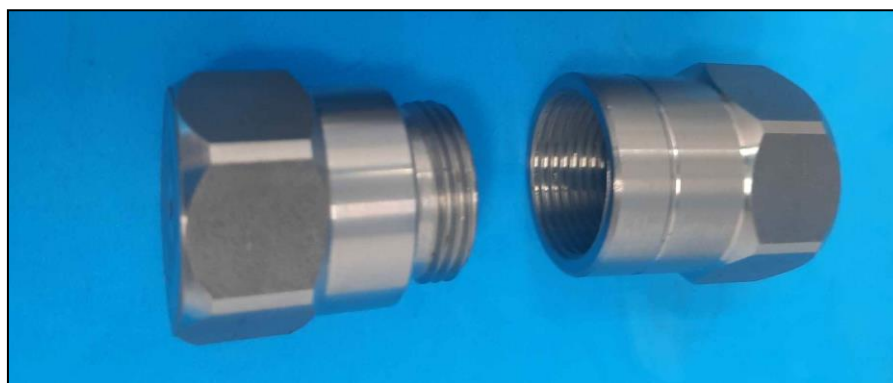

4. Now proceed to assemble the valve on CP5 pump.