



## **KIT POMPE TANDEM**

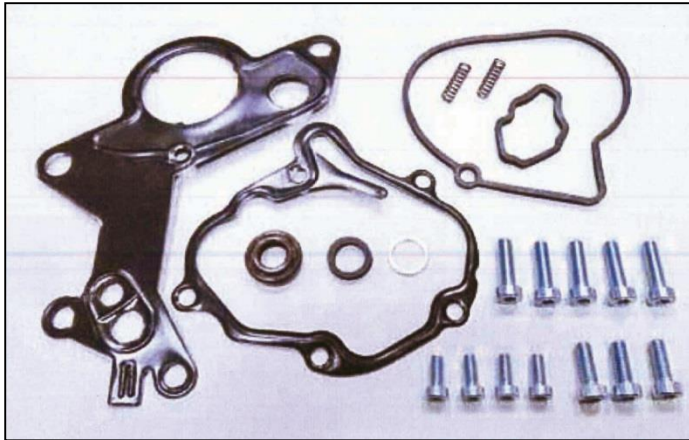

### **BK0056-359 KIT TANDEM**

038 145 209 E=H=K

DX16163

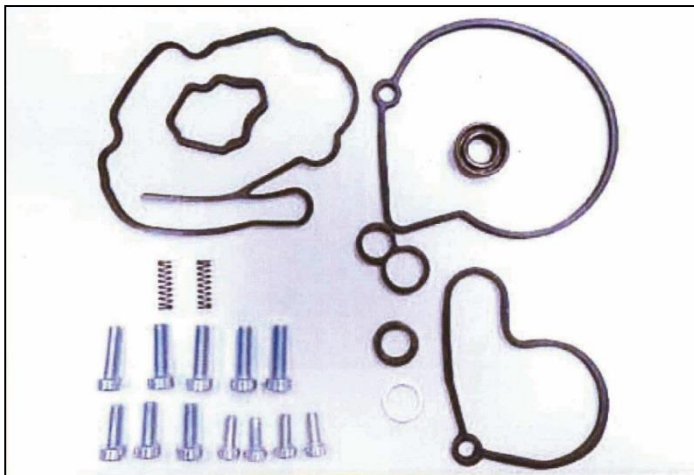


### **BK0056-358 KIT TANDEM**

F 009 D00 001

038 145 209 A

DX16161

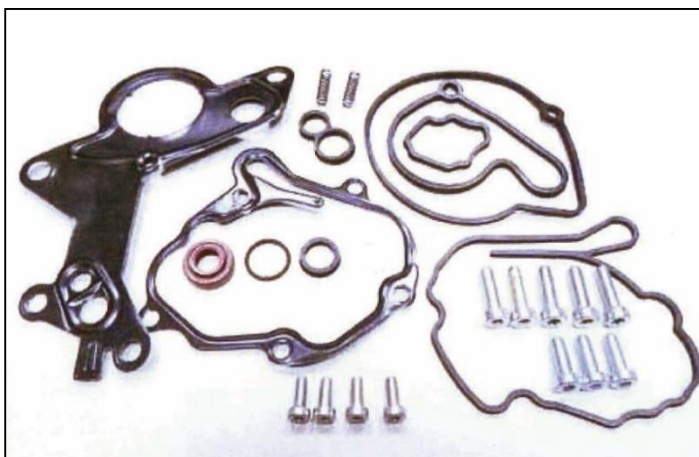


### **BK0056-359-1 KIT TANDEM**

BK0056-359 + BK0056-358

DX16161 + DX16163


## **KIT POMPE TANDEM**

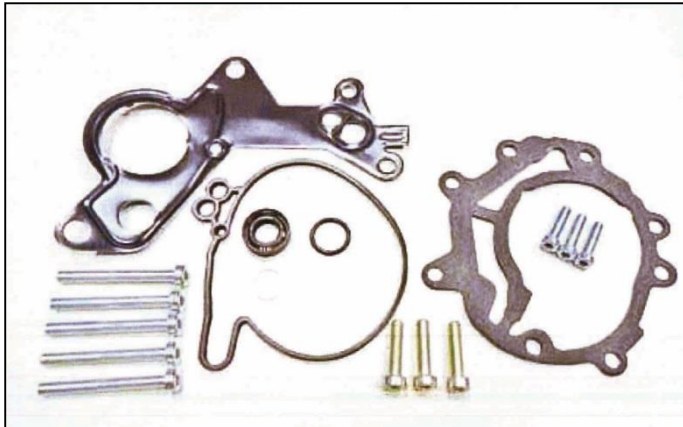

### **BK0056-503 KIT TANDEM**

038 145 209 M=209Q  
F 009 D02 008


DX16164

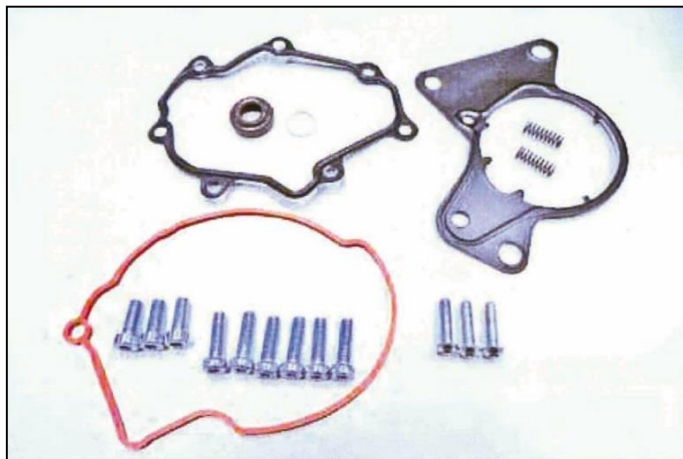

### **BK0056-504 KIT TANDEM**

070 145 209 H=F=J  
07Z 145 209 B

DX16165

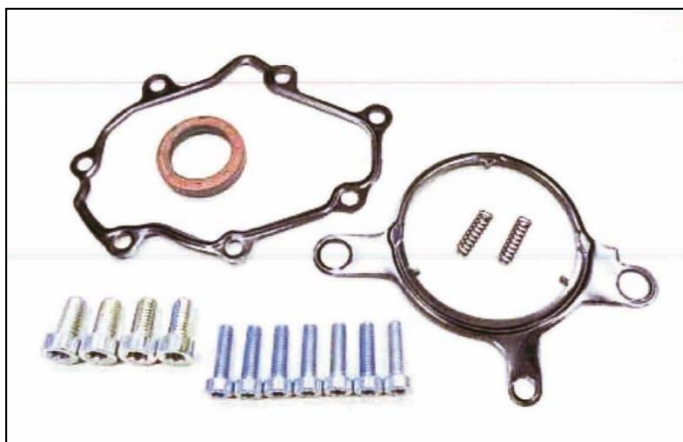


### **BK0056-505 KIT TANDEM**

07Z 127 025 F=E


DX16166

## **KIT POMPE TANDEM**

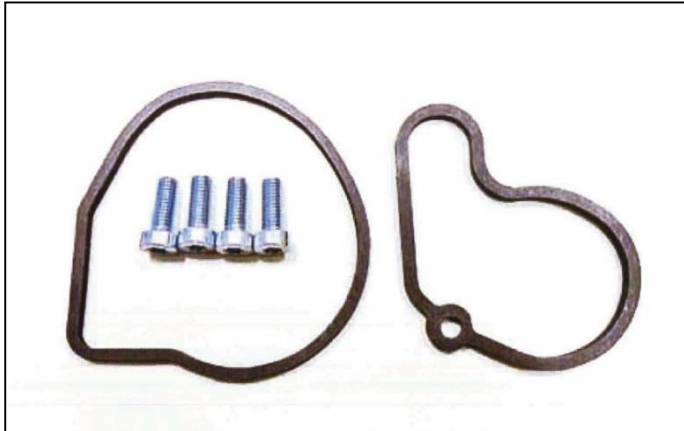

**BK0056-506** KIT TANDEM

038 145 101 B

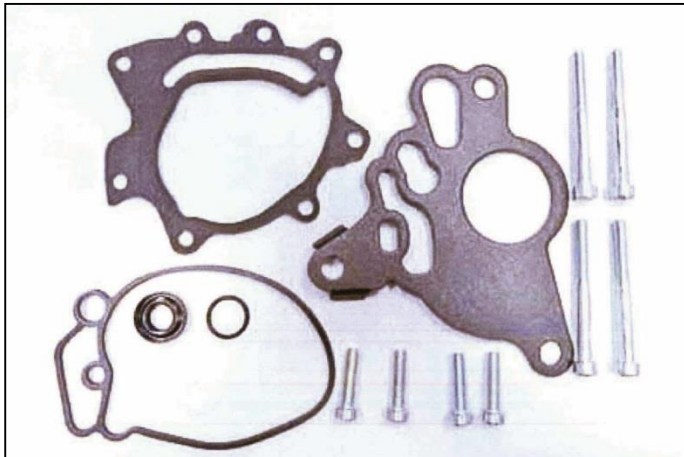

**BK0056-357** KIT TANDEM

F 009 D00 069  
03G 145 209 C

DX16162